

# Panalok: How to change a Gripper

## STEP 1



Open the channel manually on the bar feeder

## STEP 2



Use the pliers then

## STEP 3



You just locate the pin. And press with the pliers

## STEP 4



Turn the pin around

## STEP 5



with the pliers then you remove the pin

## STEP 6



remove the gripper and that's i